

BONECO
healthy air

TRADITION SINCE 1956
A SWISS COMPANY

F50 MANUAL

To reduce the risk of fire or electric shock, do not use
this fan with any solid-state speed control device



Read and save these instructions



EN 1. Scope of delivery • 2. First use • 3. Cleaning • 4. Technical specifications

POWER INPUT

EN: A voltage of 5V (1 A) is required for the BONECO F50 to function properly. If the voltage is below this value, the fan will not start, or it will run with a reduced output.

POWER INPUT: WALL SOCKET



OPERATION



OFF ▶ I ▶ II ▶ OFF



CLEANING



DATE TEHNICE



5V \dots 1A



max. 2.25W



max. 46 dB(A)



> 20'000 h



104 × 104 × 120 mm (4.1 × 4.1 × 4.7 in.)



0.2 kg

Pot suferi modificari



BONECO

healthy air

www.boneco.com

BONECO este marca Inregistrata a BONECO AG, Elvetia

47679-02